

BAND-IT

Installation Instructions KS652 Ball-Lok Tool

Warning: Always wear safety glasses when operating hand tool.




1. Wrap Ball-Lok Tie around objects and tighten clamp by hand.



2. Slot tail of Ball-Lok Tie into the slot of the tool, push nose of tool against the buckle.



3. Squeeze tool repeatedly until desired tension on the Ball-Lok Tie is reached.

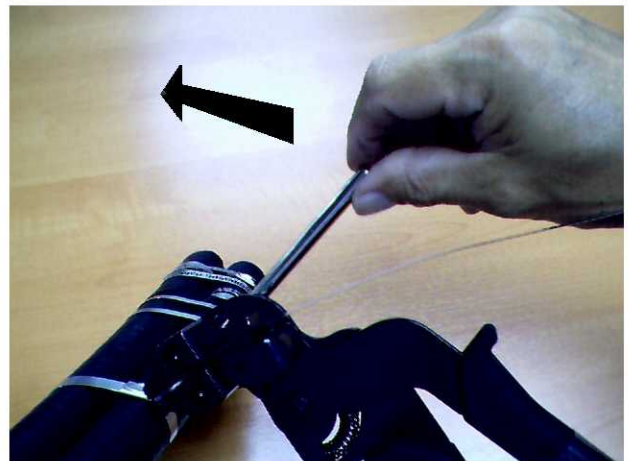

4. Turn cutter lever forward as shown to cut off excess tail end.



BAND-IT®

BAND-IT - IDEX, Inc.
a Unit of IDEX Corporation

BAND-IT CLAMPS (Asia) Pte.Ltd.
11 Second Chin Bee Road
Singapore 618777
Tel: (65) 265-8853 Fax: (65) 265-8902
email: clamps@cyberway.com.sg
www.band-it-clamps.com



Copyright BAND-IT - IDEX, Inc.
a Unit of IDEX Corporation
2001 All rights reserved



5. Finished Ball-Lok Tie assembly.