
BAND-IT®


ENGINEERED FASTENING SOLUTIONS

TRADITIONAL CABLE CLEATS COMPLICATE AN ALREADY DEMANDING PROCESS

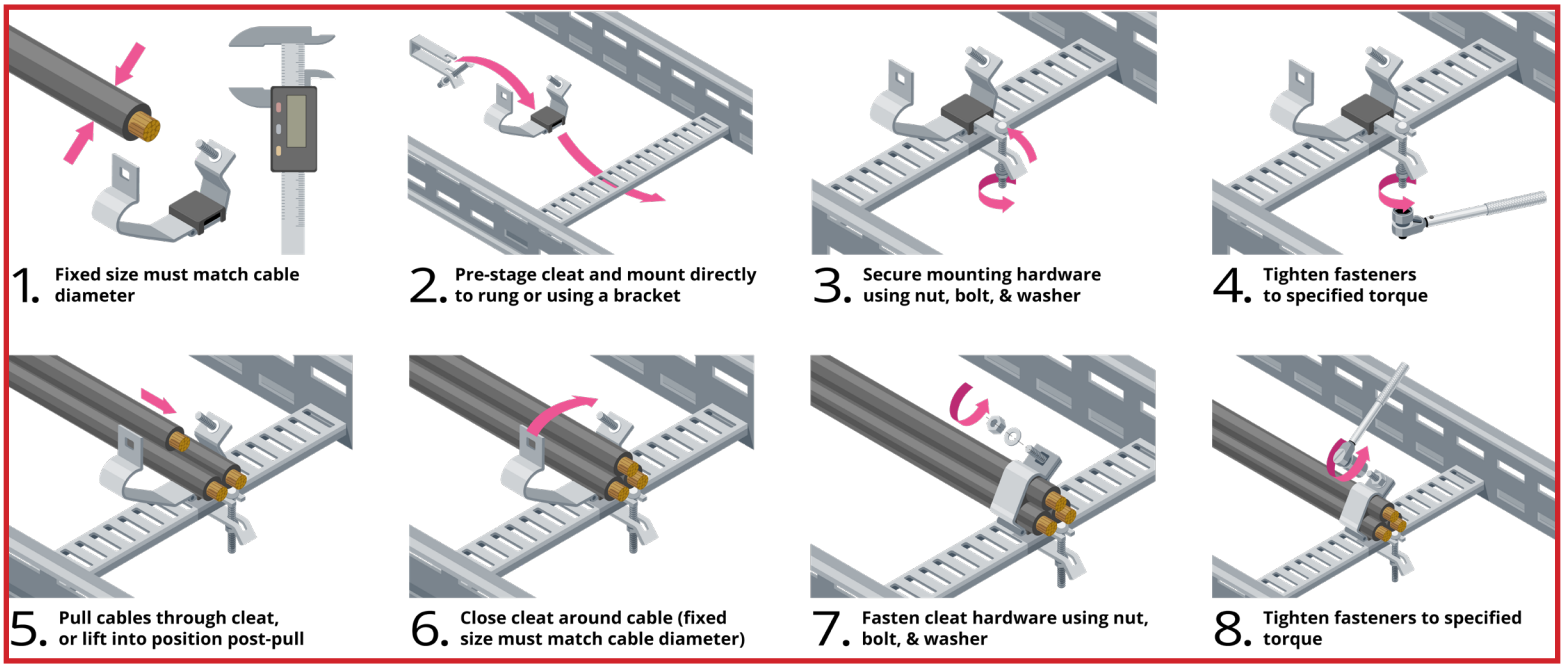

1. Fixed size must match cable diameter
2. Pre-stage cleat and mount directly to rung or using a bracket
3. Secure mounting hardware using nut, bolt, & washer
4. Tighten fasteners to specified torque
5. Pull cables through cleat, or lift into position post-pull
6. Close cleat around cable (fixed size must match cable diameter)
7. Fasten cleat hardware using nut, bolt, & washer
8. Tighten fasteners to specified torque

BAND-FAST® CABLE CLEATS REMOVE FRICTION AND SIMPLIFY SECURITY

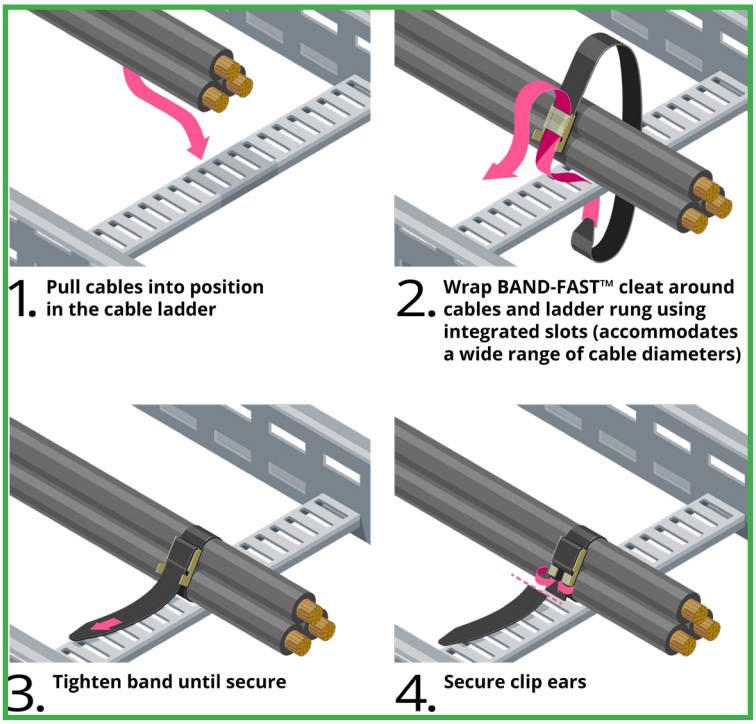

1. Pull cables into position in the cable ladder
2. Wrap BAND-FAST™ cleat around cables and ladder rung using integrated slots (accommodates a wide range of cable diameters)
3. Tighten band until secure
4. Secure clip ears

TRADITIONAL CABLE CLEATS REQUIRE

- Multiple Hardware Components
- Torque Wrenches & Multiple Tools
- Added Pre-Work
- Complicates Cable Pull Schedules
- Fixed Sizes, Fixed Configurations.

BAND-FAST CABLE CLEATS

- Short-Circuit Protection
- Ideal for Dense Cable Trays
- Compliments Cable Pull Process
- Universal Cable & Multi Configuration Fit
- Faster Installs, Fewer Parts, Long Service Life

BAND-IT® IDEX ©2026 BAND-IT IDEX. All Rights Reserved.

UES Promura
+61 3 9547 5833 | sales@uespromura.com.au
www.uespromura.com.au
10-12 McWilliam Street, Springvale VIC 3171, Australia